

# Honeywell Voyager XP 1470g PostalPoint programming

Scan codes in order, left to right then top to bottom.



DEFOVR.  
**Remove Custom Defaults**



DEFAULT.  
**Activate Defaults**



MNUCDP.  
**Set Custom Defaults**



DECLDI1.  
**Poor Quality 1D Reading On**



PAPHHC.  
**Hand Held Scanning - Mobile**



BEPLVL2.  
**Medium**



PAP131.  
**USB HID Barcode Scanner**



MNUCDS.  
**Save Custom Defaults**



DEFAULT.  
**Activate Custom Defaults**